#### Art. Nr.: 090231

24-240V

G2IM10AL20

### a.c./d.c. current monitoring in 1-phase mains

### Monitoring relays - GAMMA series Multifunction 16.6 to 400Hz Fault latch Zoom voltage 24 to 240V a.c./d.c. 2 change-over contacts Width 22.5mm



**Technical data** 

Industrial design

1. Functions a.c./d.c. current monitoring in 1-phase mains with adjustable thresholds, timing for start-up suppression and tripping delay separately adjustable and the following functions witch are selectable by means of rotary switch:

OVER	Overcurrent monitoring
OVER+LATCH	Overcurrent monitoring with fault latch
UNDER	Undercurrent monitoring
UNDER+LATCH	Undercurrent monitoring with fault latch
WIN	Monitoring the window between Min and Max
WIN+LATCH	Monitoring the window between
	Min and Max with fault latch

Adjustment range

0s

0.1s

10s

10s

indication of supply voltage

indication of relay output

indication of start-up suppression time

indication of failure of the corresponding

indication of tripping delay of the corresponding threshold

#### 2. Time ranges

Start-up suppression time: Tripping delay:

#### 3. Indicators

Green LED ON: Green LED flashes: Yellow LED ON/OFF: Red LED ON/OFF:

Red LED flashes:

4. Mechanical design

Self-extinguishing plastic housing, IP rating IP40 Mounted on DIN-Rail TS 35 according to EN 60715 Mounting position: any Shockproof terminal connection according to VBG 4 (PZ1 required), IP rating IP20 Tightening torque: max. 1Nm Terminal capacity: 1 x 0.5 to 2.5mm<sup>2</sup> with/without multicore cable end

threshold

- 1 x 4mm<sup>2</sup> without multicore cable end
- 2 x 0.5 to 1.5mm<sup>2</sup> with/without multicore cable end
- 2 x 2.5mm<sup>2</sup> flexible without multicore cable end

#### 5. Input circuit Supply voltage:

24 to 240V a.c./d.c. Tolerance: 24 to 240V d.c. 24 to 240V a.c. Rated frequency: 24 to 240V a.c. 48 to 240V d.c. Rated consumption: Duration of operation: Reset time: Wave form for a.c.: Residual ripple for d.c.: Drop-out voltage: Overvoltage category: Rated surge voltage:

terminals A1-A2 (galvanically separated) -20% to +25% -15% to +10% 48 to 400Hz 16 to 48Hz 4.5VA (1W) 100% 500ms Sinus 10% >15% of the supply voltage III (in accordance with IEC 60664-1) 4kV

#### 6. Output circuit

2 potential free change-over contacts		
Rated voltage:	250V a.c.	
Switching capacity:	750VA (3A / 250V a.c.)	
	the devices is less than 5mm!	
Switching capacity: 1250VA (5A / 250V a.c.)		
	the devices is greater than 5mm!	
Fusing:	5A fast acting	
Mechanical life:	20 x 10 <sup>6</sup> operations	
Electrical life:	2 x 10 <sup>5</sup> operations	
Quitabing fragmanau	at 1000VA resistive load	
Switching frequency:	max. 60/min at 1000VA resistive load	
	max. 6/min at 1000VA resistive load	
	(in accordance with IEC 60947-5-1) III (in accordance with IEC 60664-1)	
Overvoltage category: Rated surge voltage:	4kV	
Raleu surge vollage.	46.0	
7. Measuring circuit		
Measured variable:	d.c. or a.c. Sinus (16.6 to 400Hz)	
Input:		
100mA a.c./d.c.	terminals K-I1(+)	
1A a.c./d.c.	terminals K-I2(+)	
10A a.c./d.c.	terminals K-I3(+) (distance >5mm)	
Overload capacity:		
100mA a.c./d.c.	800mA	
1A a.c./d.c.	3A	
10A a.c./d.c.	12A	
Input resistance:		
100mA a.c./d.c.	470mΩ	
1A a.c./d.c.	47mΩ	
10A a.c./d.c.	5mΩ	
Switching threshold		
Max:	10% to 100% of I <sub>N</sub>	
Min:	5% to 95% of I <sub>N</sub>	
Overvoltage category:	III (in accordance with IEC 60664-1)	
Rated surge voltage:	4kV	
8 Accuracy		
8. Accuracy Base accuracy:	≤3% (of maximum scale value)	
Frequency response:	-10% to +5% (16.6 to 400Hz)	
Adjustment accuracy:	≤5% (of maximum scale value)	
Repetition accuracy:	<2%	
Voltage influence:	-	
Temperature influence:	≤0.05% / °C	
9. Ambient conditions		
Ambient temperature:	-25 to +55°C (in accordance with IEC 60068-1)	
	-25 to +40°C (in accordance with UL 508)	
Storage temperature:	-25 to +70°C	
Transport temperature:	-25 to +70°C	
Relative humidity:	15% to 85%	
	(in accordon a with IEC 60721.2.2 along 21/2)	

(in accordance with IEC 60721-3-3 class 3K3)

3 (in accordance with IEC 60664-1)

(in accordance with IEC 60068-2-6)

(in accordance with IEC 6068-2-27)

10 to 55Hz 0.35mm

15g 11ms

www.tele-online.com

Pollution degree:

Shock resistance:

Vibration resistance:


## G2IM10AL20 24-240V

# Functions

When the supply voltage U is applied, the output relays switch into on-position (yellow LED illuminated) and the set interval of the start-up suppression (START) begins (green LED U flashes). Changes of the measured current during this period do not affect the state of the output relay. After the interval has expired the green LED is illuminated steadily. For all the functions the LEDs MIN and MAX are flashing alternating, when the minimum value for the measured current was chosen to be greater than the maximum value.


### Overcurrent monitoring (OVER, OVER+LATCH)

When the measured current exceeds the value adjusted at the MAXregulator, the set interval of the tripping delay (DELAY) begins (red LED MAX flashes). After the interval has expired (red LED MAX illuminated), the output relays switch into off-position (yellow LED not illuminated). The output relays again switch into on-position (yellow LED illuminated), when the measured current falls below the value adjusted at the MIN-regulator (red LED MAX not illuminated). If the fault latch is activated (OVER+LATCH) and the measured current remains above the MAX-value longer than the set interval of the tripping delay, the output relays remain in the off-position even if the measured current falls below the value adjusted at the MIN-regulator. After resetting the failure (interrupting and re-applying the supply voltage), the output relays switch into on-position and a new measuring cycle begins with the set interval of the start-up suppression (START).

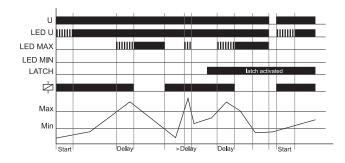


### Undercurrent monitoring (UNDER, UNDER+LATCH)

When the measured current falls below the value adjusted at the MIN-regulator, the set interval of the tripping delay (DELAY) begins (red LED MIN flashes). After the interval has expired (red LED MIN flashes). After the interval has expired (red LED MIN flashes). After the interval has expired (red LED MIN flashes). After the interval has expired (red LED MIN flashes). After the interval has expired (red LED MIN flashes). After the interval has expired (red LED MIN flashes). After the interval has expired (red LED MIN flashes). After the interval has expired (red LED MIN flashes). After reasured state has expired (red LED MIN the output relays switch into on-position (yellow LED not illuminated), when the measured current exceeds the value adjusted at the MAX-regulator. If the fault latch is activated (UNDER+LATCH) and the measured current remains below the MIN-value longer than the set interval of the tripping delay, the output relays remain in the off-position even if the measured current exceeds the value adjusted at the MAX-regulator. After resetting the failure (interrupting and re-applying the supply voltage), the output relays switch into on-position and a new measuring cycle begins with the set interval of the start-up suppression (START).

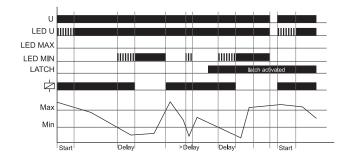


### Window function (WIN, WIN+LATCH)

The output relays switch into on-position (yellow LED illuminated) when the measured current exceeds the value adjusted at the MIN-regulator. When the measured current exceeds the value adjusted at the MAXregulator, the set interval of the tripping delay (DELAY) begins (red LED MAX flashes). After the interval has expired (red LED MAX illuminated), the output relays switch into off-position (yellow LED not illuminated). The output relays again switch into on-position (yellow LED not illuminated) when the measured current falls below the value adjusted at the MAXregulator (red LED MAX not illuminated). When the measured current falls below the value adjusted at the MIN-regulator, the set interval of the tripping delay (DELAY) begins again (red LED MIN flashes). After the interval has expired (red LED MIN illuminated), the output relays switch into off-position (yellow LED not illuminated).

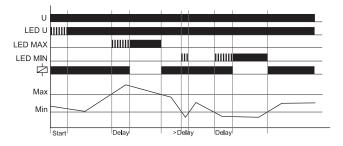


If the fault latch is activated (WIN+LATCH) and the measured current remains below the MIN-value longer than the set interval of the tripping delay, the output relays remain in the off-position even if the measured current exceeds the value adjusted at the MIN-regulator. If the measured current remains above the MAX-value longer than the set interval of the tripping delay, the output relays remain in the off-position even if the measured current falls below the value adjusted at the MAX-regulator. After resetting the failure (interrupting and re-applying the supply voltage), the output relays switch into on-position and a new measuring cycle begins with the set interval of the start-up suppression (START).

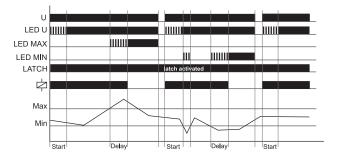


### G2IM10AL20 24-240V

# Connections


Range 100mA, supply voltage 24V a.c./d.c. and fault latch

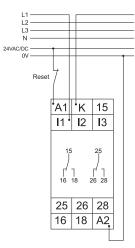


Range 1A, supply voltage 230V a.c. and fault latch

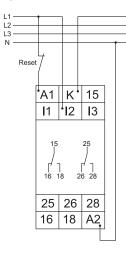

### Range 10A, supply voltage 24V a.c./d.c. without fault latch

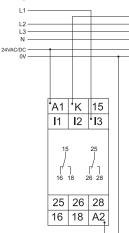

# Dimensions

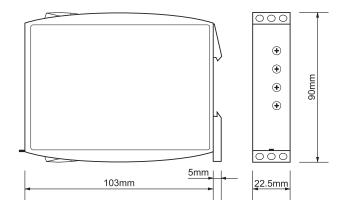

RELEASE 2013/06

Subject to alterations and errors

